


# OPERATOR MANUAL



## PNEUTORQUE® STANDARD SERIES TORQUE TOOLS

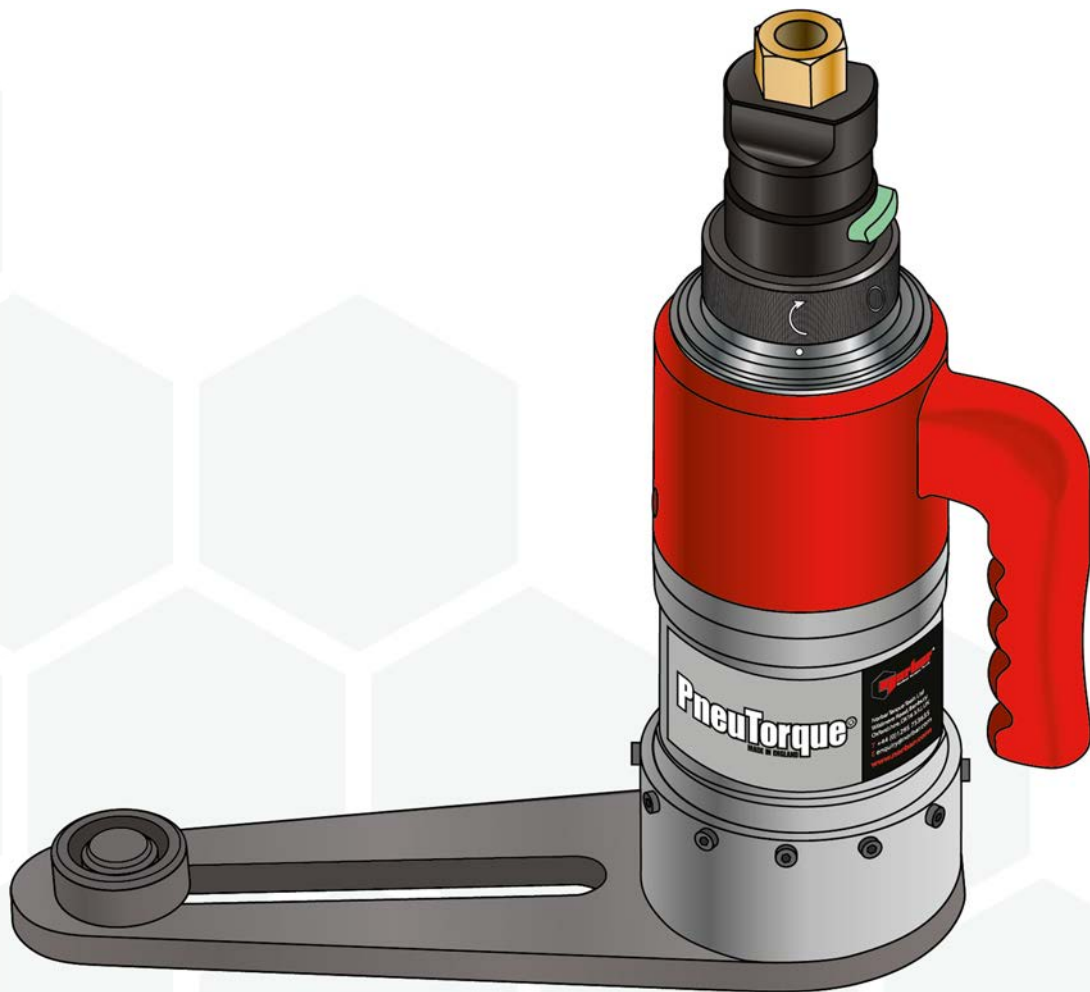

# CONTENTS

<b>Part Numbers Covered by this Manual</b>	<b>2</b>
<b>Safety</b>	<b>3</b>
General Safety Rules	3
Projectile Hazards	3
Entanglement Hazards	3
Operating Hazards	3
Repetitive Motions Hazards	4
Accessory Hazards	4
Workplace Hazards	4
Dust and Fume Hazards	4
Noise Hazards	5
Vibration Hazards	5
Additional Safety Instructions for Pneumatic Power Tools	5
PneuTorque® Specific Safety Instructions	6
Markings on Tool	6
<b>Introduction</b>	<b>7</b>
Parts Included	7
Accessories	7
<b>Features and Functions</b>	<b>8</b>
<b>Set up Instructions</b>	<b>9</b>
Pneumatic Connections	9
Lifting Handle	9
Torque Reaction	10
Setting Forward/Reverse	12
Setting Torque for Fastener Tightening	12
Setting Torque for Fastener Loosening	12
<b>Operating Instructions</b>	<b>13</b>
Tightening	13
Releasing	15
<b>Maintenance</b>	<b>16</b>
Reaction Plate	16
Air Lubrication	16
Gearbox	16
Silencer	16
Filter	16
Drive Square	17
Cleaning	17
Disposal	17
<b>Specifications</b>	<b>18</b>
General	18
Standard Series	18
<b>Declaration of Conformity</b>	<b>20</b>
<b>Trouble Shooting</b>	<b>21</b>
<b>Glossary of Terms</b>	<b>21</b>

## PART NUMBERS COVERED BY THIS MANUAL

This manual covers all PneuTorque® Standard Series torque tools; including the following:

Model (Standard Series)	Part Number			Square	Maximum Torque
	Single Speed	Manual Two Speed	Automatic Two Speed		
PT 1	16031	16031.MTS	16031.AUT	¾"	680 N·m
PT 1	16011	16011.MTS	16011.AUT	1"	680 N·m
PT 1A	16098	16098.MTS	16098.AUT	¾"	1,200 N·m
PT 1A	16097	16097.MTS	16097.AUT	1"	1,200 N·m
PT 2	16013	16013.MTS	16013.AUT	1"	1,700 N·m
PT 5	16015	16015.MTS	16015.AUT	1"	3,400 N·m
PT 6	16017	16017.MTS	16017.AUT	1½"	3,400 N·m
PT 7	16066	16066.MTS	16066.AUT	1½"	6,000 N·m
PT 9	16072	16072.MTS	16072.AUT	1½"	9,500 N·m
PT 11	16046	16046.MTS	-	2½"	20,000 N·m
PT 12	18086	18086.MTS	-	2½"	34,000 N·m
PT 13	16052	16052.MTS	-	2½"	47,000 N·m
PT 14	16045	16045.MTS	-	3½"	100,000 N·m
PT 15	18089	18089.MTS	-	Note A	150,000 N·m
PT 16	18090	18090.MTS	-	Note A	200,000 N·m
PT 17	18088	18088.MTS	-	Note A	250,000 N·m
PT 18	16054	16054.MTS	-	Note A	300,000 N·m

**NOTE A:** The output drive and reaction components must be engineered specifically for each customer application. Consult Norbar.

PneuTorque® Standard Series tools are also supplied in a 'remote' form without a handle. These are given a part number suffix 'X' (e.g. \*\*\*\*.X\*\*) and are covered by operator manual part number 34318.

# SAFETY

**IMPORTANT: THIS OPERATOR MANUAL SHOULD BE KEPT FOR FUTURE REFERENCE.**

## General Safety Rules:

- For multiple hazards, read and understand the safety instructions before installing, operating, repairing, maintaining, changing accessories on, or working near the assembly power tool for threaded fasteners. Failure to do so can result in serious bodily injury.
- Only qualified and trained operators should install, adjust or use the assembly power tool for threaded fasteners.
- Do not modify this assembly power tool for threaded fasteners. Modifications can reduce the effectiveness of safety measures and increase the risks to the operator.
- Do not discard the safety instructions; give them to the operator.
- Do not use the assembly power tool for threaded fasteners if it has been damaged.
- Tools shall be inspected periodically to verify that the ratings and markings required are legibly marked on the tool. The employer/user shall contact the manufacturer to obtain replacement marking labels when necessary.

## Projectile Hazards:

- Failure of the workpiece, of accessories or even of the tool itself can generate high-velocity projectiles.
- Always wear impact-resistant eye protection during the operation of the assembly power tool for threaded fasteners. The grade of protection required should be assessed for each use.
- Ensure that the workpiece is securely fixed.

## Entanglement Hazards:

- Entanglement hazards can result in choking, scalping and/or lacerations if loose clothing, personal jewellery, neckware, hair or gloves are not kept away from the tool and accessories.
- Inappropriate gloves can become entangled with the rotating drive, causing severed or broken fingers.
- Rotating drive sockets and drive extensions can easily entangle rubber-coated or metal-reinforced gloves.
- Do not wear loose-fitting gloves or gloves with cut or frayed fingers.
- Never hold the drive, socket or drive extension.
- Keep hands away from rotating drives.

## Operating Hazards:

- The use of the tool can expose the operator's hands to hazards including crushing, impacts, cuts and abrasions and heat. Wear suitable gloves to protect hands.
- These tools require the use of a suitable reaction which presents a crushing hazard. Ensure to follow the set up instructions in this manual.
- Operators and maintenance personnel shall be physically able to handle the bulk, weight and power of the tool.
- Hold the tool correctly; be ready to counteract normal or sudden movements and have both hands available.

- Maintain a balanced body position and secure footing.
- Release the trigger in the case of an interruption of the energy supply.
- Use only lubricants recommended by the manufacturer.
- Do not use in confined spaces and beware of crushing hands between tool and workpiece.

## Repetitive Motions Hazards:

- When using a power tool for threaded fasteners, the operator can experience discomfort in the hands, arms, shoulders, neck, or other parts of the body.
- While using an assembly power tool for threaded fasteners, the operator should adopt a comfortable posture whilst maintaining secure footing and avoiding awkward or off-balanced postures. The operator should change posture during extended tasks, which can help avoid discomfort and fatigue.
- If the operator experiences symptoms such as persistent or recurring discomfort, pain, throbbing, aching, tingling, numbness, burning sensations or stiffness, these warning signs should not be ignored. The operator should tell the employer and consult a qualified health professional.

## Accessory Hazards:

- Disconnect the assembly power tool for threaded fasteners from the energy supply before changing the tool or accessory.
- Use only sizes and types of accessories and consumables that are recommended by the assembly power tool for threaded fasteners manufacturer; do not use other types or sizes of accessories and consumables.

## Workplace Hazards:

- Slips, trips and falls are major causes of workplace injury. Be aware of slippery surfaces caused by the use of the tool and also of trip hazards caused by the air line or hydraulic hose.
- Proceed with care in unfamiliar surroundings. Hidden hazards, such as electricity or other utility lines, can exist.
- The assembly power tool for threaded fasteners is not intended for use in potentially explosive atmospheres and is not insulated against coming into contact with electrical power.
- Make sure there are no electrical cables, gas pipes, etc., that can cause a hazard if damaged by use of the tool.

## Dust and Fume Hazards:

- Dust and fumes generated when using assembly power tools for threaded fasteners can cause ill health (for example, cancer, birth defects, asthma and/or dermatitis); risk assessment and implementation of appropriate controls for these hazards are essential.
- Risk assessment should include dust created by the use of the tool and the potential for disturbing existing dust.
- Direct the exhaust so as to minimize disturbance of dust in a dust-filled environment.
- Where dust or fumes are created, the priority shall be to control them at the point of emission.
- All integral features or accessories for the collection, extraction or suppression of airborne dust or fumes should be correctly used and maintained in accordance with the manufacturer's instructions.
- Use respiratory protection in accordance with employer's instructions and as required by occupational health and safety regulations.

## Noise Hazards:

- Unprotected exposure to high noise levels can cause permanent, disabling, hearing loss and other problems, such as tinnitus (ringing, buzzing, whistling or humming in the ears). Therefore a risk assessment and implementation of appropriate controls for these hazards are essential.
- Appropriate controls to reduce the risk may include actions such as damping materials to prevent workpieces from “ringing”.
- Use hearing protection in accordance with employer's instructions and as required by occupational health and safety regulations.
- Operate and maintain the assembly power tool for threaded fasteners as recommended in the instruction handbook, to prevent an unnecessary increase in noise levels.
- If the assembly power tool for threaded fasteners has a silencer, always ensure it is in place and in good working order when the assembly power tool for threaded fasteners is operating.
- Select, maintain and replace the consumable/tool as recommended in the instruction handbook, to prevent an unnecessary increase in noise.

## Vibration Hazards:

- Exposure to vibration can cause disabling damage to the nerves and blood supply of the hands and arms.
- Wear warm clothing when working in cold conditions and keep your hands warm and dry.
- If you experience numbness, tingling, pain or whitening of the skin in your fingers or hands, stop using the assembly power tool for threaded fasteners, tell your employer and consult a physician.
- Operate and maintain the assembly power tool for threaded fasteners as recommended in the instruction handbook, to prevent an unnecessary increase in vibration levels.
- Do not use worn or ill-fitting sockets or extensions, as this is likely to cause an increase in vibration.
- Select, maintain and replace the consumable/tool as recommended in the instruction handbook, to prevent an unnecessary increase in vibration levels.
- Support the weight of the tool in a stand, tensioner or balancer, if possible.
- Hold the tool with a light but safe grip, taking account of the required hand reaction forces, because the risk from vibration is generally greater when the grip force is higher.

## Additional Safety Instructions for Pneumatic Power Tools:



- Air under pressure can cause severe injury:
  - Always shut off air supply, drain hose of air pressure and disconnect tool from air supply when not in use, before changing accessories or when making repairs;
  - Never direct air at yourself or anyone else.
- Whipping hoses can cause severe injury. Always check for damaged or loose hoses and fittings.
- Cold air shall be directed away from the hands.
- Air lines with safe disconnect couplings, as supplied, are recommended. Whenever universal twist couplings (claw couplings) are used, lock pins shall be installed and whipcheck safety cables shall be used to safeguard against possible hose-to-tool and hose-to-hose connection failure.
- Do not exceed the maximum air pressure stated on the tool.

- For torque-control and continuous-rotation tools, the air pressure has a safety critical effect on performance. Therefore, requirements for length and diameter of the hose shall be specified.
- Never carry an air tool by the hose.

## PneuTorque® Specific Safety Instructions:

- This tool is intended for use with threaded fasteners. Other uses within the limits of the tool may be appropriate. Please contact Norbar for guidance.
- The user (or the user's employer) shall assess the specific risks that can be present as a result of each use. This Operator Manual contains sufficient information for the end user to be able to perform an initial risk assessment.
- Unexpected direction of drive square movement can cause a hazardous situation.
- Isolate the tool from all energy sources before changing or adjusting the drive square or socket.

## Markings on Tool

Pictograms on Tool	Meaning
	Read and understand the Operator Manual.
	<p>If a Reaction is purchased from Norbar it will include this label:</p> <p>Unexpected tool movement due to reaction forces or breakage of drive square or reaction bar may cause injuries.          There is a risk of crushing between the reaction bar and work piece.          Keep hands away from reaction bar.          Keep hands away from tool output.</p>

# INTRODUCTION

The PneuTorque® Standard Series tools are non-impacting, air driven power tools designed for applying torque to threaded fasteners. There are models to cover torque capacities of 680 N·m to 300,000 N·m. The tools use an external air pressure regulator (included in a Lubro Control Unit supplied as an accessory) to set the air pressure that controls the stall torque. The PneuTorque® must always be operated with the following:-

- Filtered dry air supply. Minimum recommended compressor rating: 6.9 bar (100 psi), 19 l/s (40 CFM).
- Lubro Control Unit or similar Filter, Regulator and Lubricator Unit ½" Bore (12 mm).
- Impact or high-quality sockets.
- Reaction bar.

## Parts Included

Model	Part Number					
	Reaction Plate / Arm	Reaction Foot	Lifting Ring	Lubro Control Unit	Torque Wrench	Transporting Trolley
PT 1 & PT 2	16420	-	-	-	-	-
PT 5 & PT 6	16544	-	-	-	-	-
PT 7	16263	16344	-	-	-	-
PT 9	16387	16394	-	-	-	-
PT 11	16322	-	16348	16074	-	-
PT 12	18994	-	19262	16074	-	-
PT 13	16330	-	16311	16074	13049	16326
PT 14	16308	-	16311	16074	13049	16326
PT 15	Note A	-	-	16074	-	-
PT 16	Note A	-	16311	16074	13050	-
PT 17	Note A	-	16311	16074	13050	-
PT 18	Note A	-	16311	16074	13050	-

All tools include Operator Manual (Part number 34317), Calibration Certificate & Air pressure graph (Part number 34208)

**NOTE A:** The output drive and reaction components must be engineered specifically for each customer application. Consult Norbar.

## Accessories

Nose Extensions	PT1	PT2	PT5
6" Nose Extension (¾" drive)	16480.006	-	-
9" Nose Extension (¾" drive)	16480.009	-	-
12" Nose Extension (¾" drive)	16480.012	-	-
6" Nose Extension (1" drive)	16542.006	16542.006	16694.006
9" Nose Extension (1" drive)	16542.009	16542.009	16694.009
12" Nose Extension (1" drive)	16542.012	16542.012	16694.012

Other Parts	Part Number
Replacement drive square	See Maintenance
Air Filter	18280
Silencer	16457
Lubro Control Unit	16074
Transducers	Consult Norbar



# FEATURES AND FUNCTIONS

## Replaceable Drive Square

To avoid internal damage (especially due to torque overload), the output drive square has been designed to shear first. Tools are fitted with a drive square that can easily be replaced, alternative drive sizes are also available.

## Trigger

The trigger controls the flow of air, it must be held in to operate the tool. If the operator is not present the tool will stop.

## Forward / Reverse Collar

All tools can be used for tightening as well as releasing bolts. A collar for ⤵ (Forward or clockwise) and ⤴ (Reverse or counter-clockwise) is located next to the trigger for easy access.

## Gearbox

For safety the gearbox and handle can turn independently, so torque reaction is never transmitted back to the operator.

## Lifting Handle

The lifting handle allows comfortable and safe use of the tool.

The PT 11 – PT 18 are supplied with a lifting ring for easy handling.  
In addition the PT 13 & PT 14 are supplied on a transporting trolley (Figure 1).

## Low Operator Fatigue

The tools are quiet and do not operate with an impacting or pulsing action.

## Optional Transducers

Electronic torque transducers can be directly fitted for precise torque monitoring.




**FIGURE 1** – Transporting Trolley

# SET UP INSTRUCTIONS

## Pneumatic Connections



**WARNING:** TO AVOID HAZARD FROM WHIPPING AIR HOSES MAKE ALL CONNECTIONS TO THE TOOL BEFORE TURNING ON THE AIR SUPPLY.

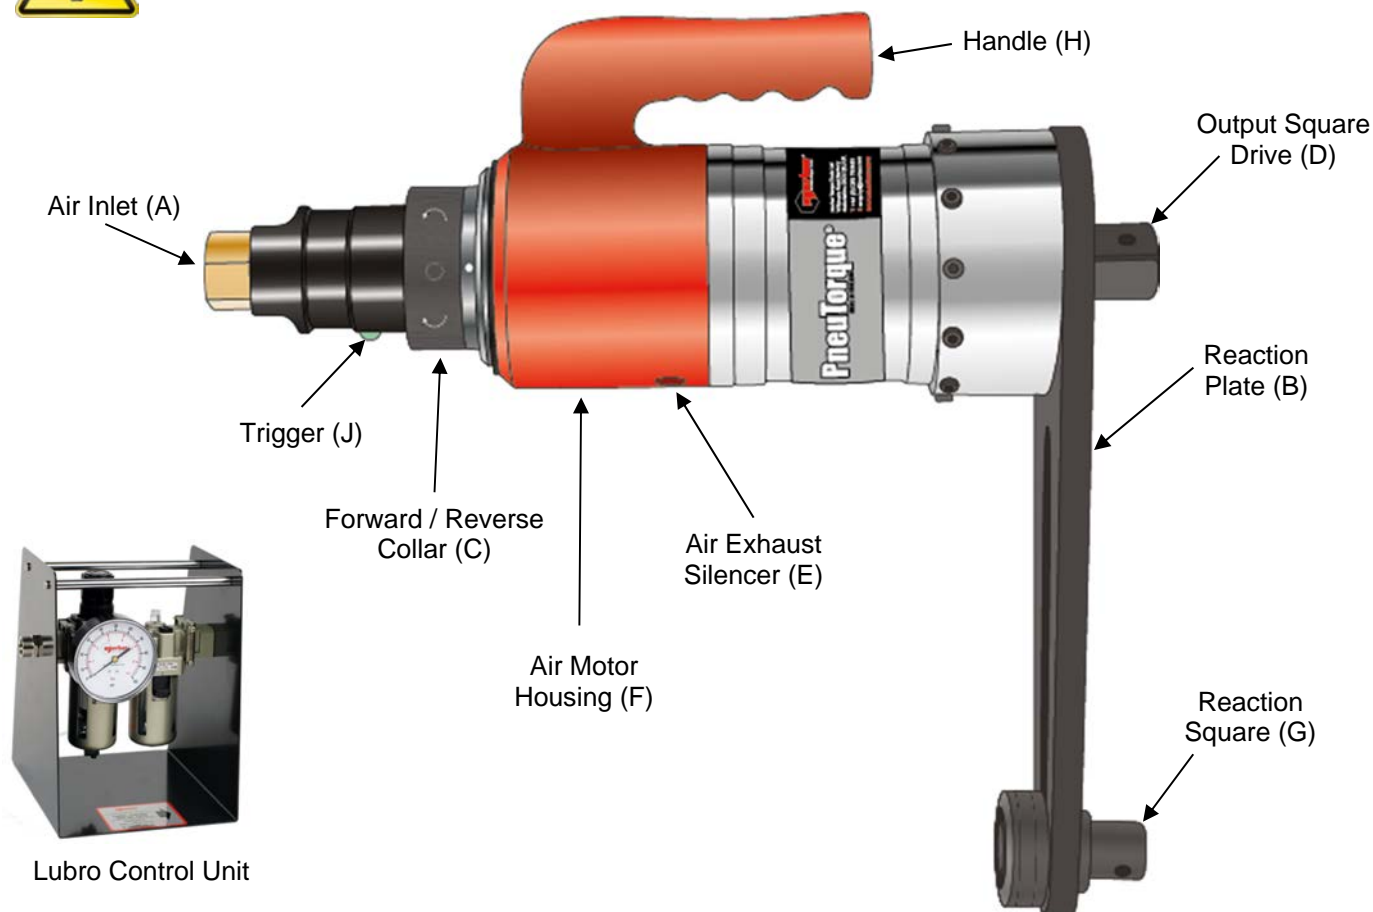

**FIGURE 2 – Tool Features**

Make sure all air hoses are clean and free from dirt.

Connect the tool air inlet hose (A.) to the outlet side of the lubro control unit, observing air flow direction arrows. Use a minimum ½" bore (12 mm) hose with a maximum length of 3 m.

**TIP:** Fit the coupling socket to air hose.

To connect, push couplings together.

To disconnect, pull back lock on socket coupling.



Connect the inlet side of the lubro control unit to the air supply. Use a minimum ½" bore (12 mm) hose with a maximum length of 5 m (longer hoses will reduce the performance of the tool).

Check the lubro control unit oil level and fill to correct level if required. (see "MAINTENANCE")

## Lifting Handle


Fit lifting handle (where supplied) to top of the Air Motor Housing ('F' in figure 2.). Adjust the handle position so the tool can be held comfortably. Tighten the socket screws securely.

## Torque Reaction


When the PneuTorque® is in operation the reaction arm rotates in the opposite direction to the output drive square and must be allowed to rest squarely against a solid object or surface adjacent to the bolt to be tightened.




**WARNING:** IF THE REACTION PLATE IS EXTENDED FORWARD OF THE DRIVE SQUARE, LARGER INDUCED BENDING STRESS WILL RESULT, SO THE PLATE MAY NO LONGER BE STRONG ENOUGH.

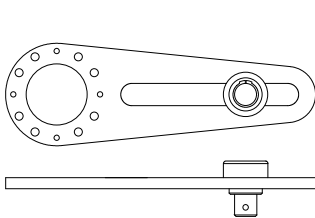

**FIGURE 3** – Typical reaction (with sliding reaction square) for PT 1 to PT 5

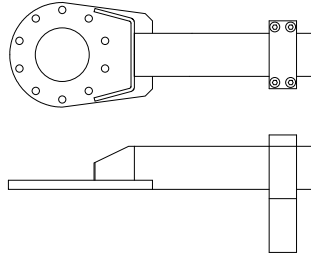

**FIGURE 4** – Typical reaction (with adjustable foot) for PT 7 and PT 9

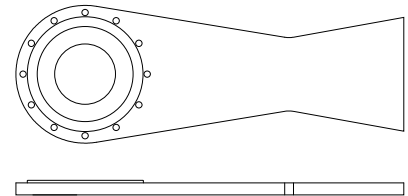

**FIGURE 5** – Typical reaction for PT 11


**TIP:** Take the reaction as far away from the multiplier as practical.

Fit reaction plate ('B' in Figure 2) to tool using bolts provided and torque to value specified on reaction arm. If no torque is specified follow table below:

Model	Reaction Plate / Arm	Fixing Bolt Size	Fixing Bolt Torque
PT 1 & PT 2	16420	2BA	9 N·m
PT 5 & PT 6	16544	¼" BSF	19 N·m
PT 7	16263	M10	83 N·m
PT 9	16387	¾" BSF	75 N·m
PT 11	16322	M10	83 N·m
PT 12	18994	M12	150 N·m
PT 13	16330	M16	310 N·m
PT 14	16308	M16	310 N·m
PT 15	-	-	-
PT 16	-	M20	400 N·m
PT 17	-	M20	400 N·m
PT 18	-	M20	400 N·m

**NOTE:** It is recommended to check the reaction plate bolts are correctly tightened every week.

It is essential the reaction plate rests squarely against a solid object or surface adjacent to the fastener to be tightened. The contact area must be within the shaded area of Figure 6, with the contact area as large as possible.

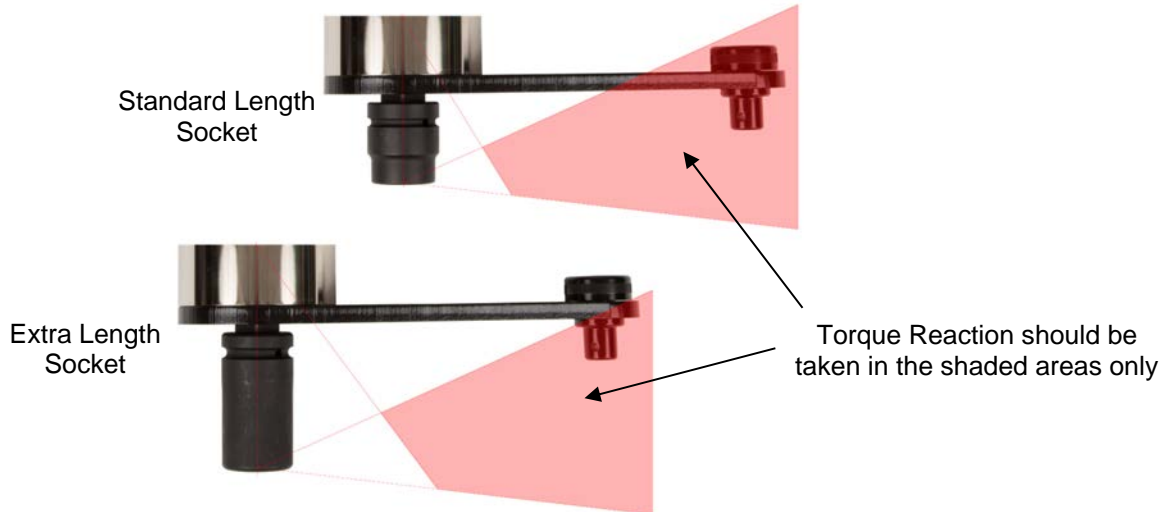

**FIGURE 6 – Reaction limitations**



**WARNING: CARE MUST BE TAKEN TO ENSURE THAT THE REACTION ARM IS ONLY USED WITHIN THE LIMITATIONS SHOWN IN FIGURE 6.**

For special applications or where extra deep sockets must be used the standard arm may be extended but only within the limitations shown on Figure 6. Alternative reaction devices are available.



**WARNING: FAILURE TO OBSERVE THE LIMITATIONS SHOWN IN FIGURE 6 WHEN MODIFYING STANDARD REACTION ARMS MAY RESULT IN PREMATURE WEAR OR DAMAGE TO THE TOOL.**

Standard drive square extensions **MUST NOT** be used as these will cause serious damage to the tool output drive. A range of nose extensions is available for applications where access is restricted. These are designed to support the final drive correctly.

When the PneuTorque® is in operation the reaction plate rotates in the opposite direction to the output drive square and must be allowed to rest squarely against a solid object or surface adjacent to the bolt to be tightened. (See Figure 7 & 8).



**WARNING: ALWAYS KEEP HANDS CLEAR OF THE REACTION ARM WHEN THE TOOL IS IN USE OR SERIOUS INJURY MAY RESULT.**



**FIGURE 7 – Example of clockwise ↻ reaction**




**FIGURE 8 – Example of counter-clockwise ↻ reaction**

**TIP: For an extended tool life ensure the reaction point remains square to the multiplier, this will minimise stress on the output square. If the multiplier tilts under load, the reaction may not remain square.**

## Setting Forward / Reverse

All tools are fitted with a direction collar, see Figure 9.

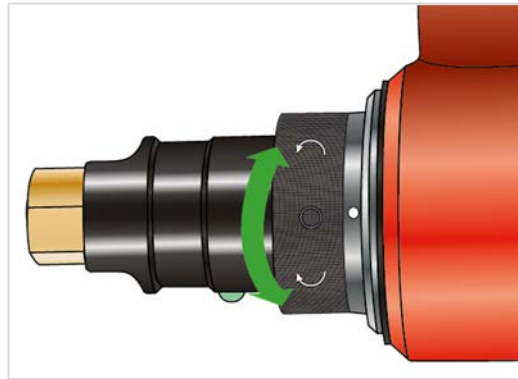

**FIGURE 9** – Collar for ⤵, ○ or ⤴ operation

Rotate collar to select ⤵ for forward (clockwise), ⤴ for reverse (counter-clockwise) or ○ for off.



**WARNING:** FAILURE TO FULLY ENGAGE THE FORWARD / REVERSE COLLAR WILL RESULT IN DAMAGE TO THE SELECTOR VALVE.

## Setting Torque for Fastener Tightening

The stall torque of these tools is determined by the air pressure set on an external lubro control unit.

Tools are supplied with an Air Pressure Graph which relates torque output to air pressure. Set the torque output as follows:

1. Turn the collar, Figure 9, to select direction.
2. For Manual two speed tools (Part number \*\*\*\*\*.MTS) select 'SLOW' speed.
3. Establish the air pressure required using the Air Pressure Graph.
4. Ensure the drive square is able to free run.
5. Press and hold the trigger ('J' in Figure 2) and adjust the lubro control unit pressure until the correct figure is shown on the gauge.

**IMPORTANT:** THE TOOL MUST BE FREE RUNNING WHILE ADJUSTING THE AIR PRESSURE TO GIVE THE CORRECT SETTING.

**WHILE THE TOOL IS FREE RUNNING CHECK THAT LUBRO CONTROL UNIT IS SUPPLYING APPROXIMATELY SIX DROPS OF OIL PER MINUTE.**

## Setting Torque for Fastener Loosening

1. Ensure that the tool control system is set for the required rotation.
2. Establish maximum air pressure from the associated Air Pressure Graph or tool label.
3. Adjust the pressure regulator until the correct pressure is achieved.



**WARNING:** EXCEEDING THE MAXIMUM AIR PRESSURE WILL CAUSE OVERLOADING AND MAY LEAD TO SERIOUS DAMAGE.



**WARNING:** CHANGING THE AIR PRESSURE AFTER SETTING THE PRESSURE REGULATOR WILL CHANGE THE STALL TORQUE VALUE.

# OPERATING INSTRUCTIONS



**WARNING: KEEP HANDS CLEAR OF THE REACTION ARM.**



**WARNING: WHEN USING THIS TOOL IT MUST BE SUPPORTED AT ALL TIMES IN ORDER TO PREVENT UNEXPECTED RELEASE IN THE EVENT OF FASTENER OR COMPONENT FAILURE.**



**WARNING: BEFORE USING TOOL, WEAR SUITABLE PPE, INCLUDING SAFETY SHOES, EYE PROTECTION, GLOVES AND OVERALLS.**



**WARNING: IF EQUIPMENT IS USED IN A MANNER NOT SPECIFIED BY THE MANUFACTURER, INJURY OR DAMAGE COULD RESULT.**



**WARNING: CHANGING THE AIR PRESSURE AFTER SETTING THE PRESSURE REGULATOR WILL CHANGE THE STALL TORQUE VALUE.**

## Tightening

1. Fit the PneuTorque® with the correct size impact or high-quality socket.

**TIP:** For added safety it is recommended to secure the socket to the square drive. This is often achieved using a pin and O-ring, see socket manufacturer for guidance. The drive squares all include a hole to accommodate a socket retaining pin. (Note: Socket & retaining pin not included)

**TIP:** The exhaust air (containing oil) is expelled from the tool at the bottom of the handle. The exhaust barrel can rotate to allow the operator to direct the flow of air away from them.



2. Ensure the Forward / Reverse collar is correctly set.
3. Set the air pressure as described in “setting torque for bolt tightening” within the Set Up section.
4. Rotate tool and reaction arm into a convenient position. Fit the tool onto the fastener. Locate reaction arm adjacent to the reaction point.
5. Adopt a suitable posture to counteract normal or unexpected movement of the tool due to reaction forces.

**NOTE:** Follow the instructions for **SINGLE SPEED**, **MANUAL TWO SPEED** or **AUTOMATIC TWO SPEED**:

### Single Speed (Part Number with no suffix)

6. Press the trigger in short bursts to bring the reaction arm into contact with the reaction point.
7. Fully press the trigger and keep fully depressed until tool stalls.

8. Release the 'trigger' and turn Collar to 'OFF'.
9. Remove tool from fastener.

### Manual Two Speed (Part Number "\*\*\*\*\*.MTS")

**NOTE:** 'FAST' speed is for initially running up of the fastener and 'SLOW' speed for applying the final torque.

6. Set speed selector to 'FAST'.

**TIP:** To change the speed:

- A. Ensure tool is not running.
- B. Pull selection knob out.
- C. Move knob to required speed.
- D. Ensure selection knob is fully engaged in recess.

7. Press the trigger in short bursts to bring the reaction arm into contact with the reaction point.
8. Fully press the trigger and keep fully depressed until tool stalls then release the trigger.
9. Set speed selector to 'SLOW'.

**NOTE:** The air pressure calibration graph is only correct in the 'SLOW' setting.

10. Fully press the trigger and keep fully depressed until tool stalls.
11. Release the trigger and turn collar to 'OFF'.
12. Remove tool from fastener.

**TIP:** Where there are several fasteners in the joint, eg. a flange, it may be desirable to tighten all of the fasteners with the tool in 'FAST' gear. Then set the gear selector to 'SLOW' and apply final torque.

### Automatic Two Speed (Part Number "\*\*\*\*\*.AUT")

**NOTE:** These tools operate at a 'FAST' speed (approximately 5 times faster than normal) until torque is detected, then the tool automatically change to 'SLOW' speed for final tightening of the fastener.

6. Press the trigger in short bursts to bring the reaction arm into contact with the reaction point.
7. Fully press the trigger and keep fully depressed until tool stalls.
8. Release the trigger and turn collar to 'OFF' and remove tool from fastener.
9. Remove tool from fastener.

**NOTE:** If the trigger is released or collar is turned back to the 'OFF' position before the tool stalls, full torque will NOT be applied to the fastener.

**TIP:** If the tool will not release from the bolt, turn collar to the opposite direction and squeeze the trigger for a fraction of a second.



**FIGURE 10 – 'FAST' speed above, 'SLOW' speed below.**



## Releasing

1. Fit PneuTorque® with the correct size impact or high-quality socket.
2. Ensure the Forward / Reverse collar is correctly set (in  $\curvearrowright$  for right hand threads).
3. Rotate tool and reaction arm into a convenient position.  
Fit the tool onto the fastener.  
Locate reaction arm adjacent to the reaction point.
4. Adopt a suitable posture to counteract normal or unexpected movement of the tool due to reaction forces.
5. Gently press trigger to bring the reaction arm into contact with the reaction point.
6. Fully press the trigger and keep fully depressed until fastener releases.



**TIP:** If unable to release the fastener increase the air pressure to the tool.  
Do not use excessive air pressure.



**WARNING:** EXCEEDING THE MAXIMUM AIR PRESSURE WILL CAUSE OVERLOADING AND MAY LEAD TO SERIOUS DAMAGE.

7. Remove tool from fastener.



**WARNING:** CHANGING THE AIR PRESSURE AFTER SETTING THE PRESSURE REGULATOR WILL CHANGE THE STALL TORQUE VALUE.



# MAINTENANCE

To maintain optimum performance and safety, regular maintenance needs to be carried out. The only user maintenance required on these tools is the replacement of drive squares and the silencer. Any other maintenance or repairs should be carried out by Norbar or a Norbar-approved agent and should form part of a service. Service intervals will depend on the type of usage of the tools and the environment in which they are being used. The maximum recommended maintenance and recalibration interval is 12 months.

**TIP:** Steps the operator can take to reduce the amount of maintenance required include:

1. Use the tool in a clean environment.
2. Use an air compressor fitted with a dryer.
3. Ensure the Lubro Control Unit has sufficient hydraulic oil.
4. Ensure the Lubro Control Unit delivers hydraulic oil at the correct rate.
5. Ensure the Lubro Control Unit is regularly maintained, see product manual.
6. Maintain the correct torque reaction.

## Reaction Plate

Every week check that the bolts fastening reaction plate are tightened to the torque stamped onto the reaction plate.

## Air Lubrication

Add Fuchs Silkair VG22 or Shell Tellus S2 VX15 or equivalent good quality hydraulic oil to the Lubro unit.

## Gearbox


Under normal operating conditions it is not necessary to re-grease the gearbox. The gearbox contains Shell Gadus S2 V220 or equivalent good quality grease.

## Silencer

The silencer (#16457) should be changed every 12 months. This may be more frequent for high tool usage or dirty environments.

To change silencer:

1. Remove circlip from end of handle.
2. Slide handle to access silencer.
3. Change silencer.
4. Replace handle and circlip.

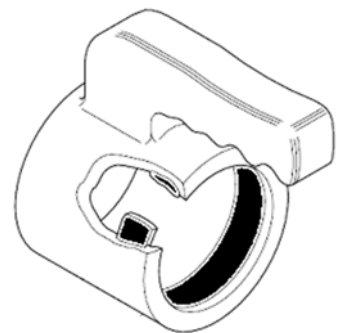


**FIGURE 11 – Silencer location**

## Filter

The air filter (#19188) should be changed every 12 months. This may be more frequent for high tool usage or dirty environments.

To change filter:

1. Remove inlet air hose.
2. Remove filter from inside tool air inlet.
3. Fit new filter.
4. Replace inlet air hose.

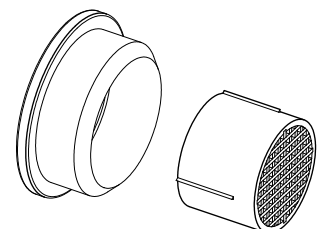


**FIGURE 12 – Air filter**

**TIP:** To help removal use a small screwdriver or a pair of internal circlip pliers.

## Drive Square

To avoid internal damage (especially due to torque overload), the output drive square has been designed to shear first. This saves major internal damage and allows easy square removal.

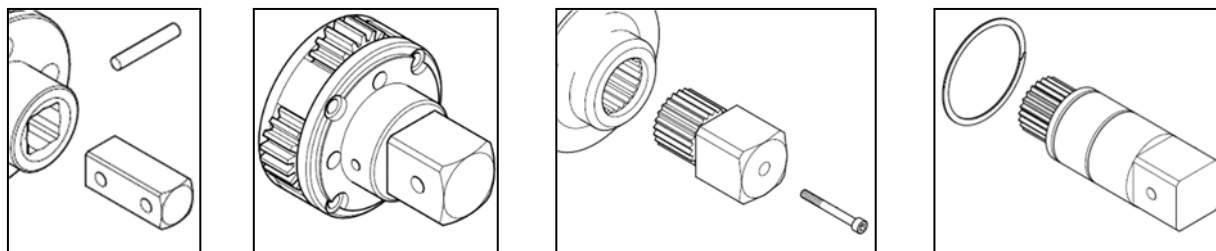

**FIGURE 13** – Drive square fixing (left to right): Pin, Carrier Assembly, Screw and Circlip.

Tool	Square Size	Drive Square Part Number	Fixing	Screw Torque (N·m)
PT 1 / PT 2	¾"	# 16424	Pin (# 26228)	-
PT 1 / PT 2	1"	# 16425	Pin (# 26228)	-
PT 5	1"	# 16549	Pin (#26242)	-
PT 6	1½"	# 16548	Carrier assembly.	-
PT 7	1½"	# 16295	M5 screw (# 25352.45)	8 – 9
PT 9	1½"	# 16611	M5 screw (# 25352.40)	8 – 9
PT 11	2½"	# 16323	M6 screw (# 25353.60)	16 – 18
PT 12	2½"	# 16310	M6 screw (# 25353.60) + Circlip (# 26432)	16 – 18
PT 13	2½"	# 16310	M6 screw (# 25353.60) + Circlip (# 26432)	16 – 18
PT 14	3½"	# 16309	M6 screw (# 25353.60)	16 – 18
PT 15	-	-	M6 screw (# 25353.60)	-
PT 16	-	-	M6 screw (# 25353.60)	-
PT 17	-	-	Application specific	-
PT 18	-	-	Application specific	-

**NOTE:** The drive squares are designed to be replaced by a competent service engineer with standard tools. A new fixing screw is recommended on reassembly.

**TIP:** If the square has sheared it may be necessary to use pliers to remove the broken parts.

## Cleaning

Keep the tool in a clean condition to aid safety. Do not use abrasives or solvent-based cleaners.

## Disposal

Recycling considerations:

Component	Material
Handle	Aluminium casting with epoxy finish.
Annulus	Alloy steel with nickel plate finish.
Reaction plate	Alloy steel with chemical black finish.


# SPECIFICATIONS

## General


Repeatability:	+/- 5%.
Air Supply:	Maximum pressure 6.0 bar (For maximum torque capacity). Air consumption 19 litres / sec (40 ft³/m [CFM]).
Recommended Lubrication:	Fuchs Silkair VG22 or Shell Tellus S2 VX15 for the Lubro Control Unit.
Temperature Range:	0°C to +50°C (operating). -20°C to +60°C (storage).
Maximum Operating Humidity:	85% Relative Humidity at 30°C.
Maximum Vibration at Handle:	< 2.5 m/s² measured in accordance with ISO 28927-2. Measured tool vibration (ah) = 0.444 m/s² with uncertainty (K) = 0.14 m/s²
Sound Pressure Level:	The sound pressure level is 81 dB(A) uncertainty K = 3dB, measured in accordance with BS EN ISO 11148-6
Environment:	Indoor & dry outdoor use within a light industrial environment.

## Standard Series

Model	Torque		Free Speed (At maximum air pressure)		Weight (kg)		
	Minimum	Maximum	Single speed	MTS / AUT	Tool Single speed	Tool MTS / AUT	Reaction
PT 1	160 N·m (120 lbf·ft)	680 N·m (500 lbf·ft)	30 rev/min	150 rev/min	10.6	14.1	2.2
PT 1A	270 N·m (200 lbf·ft)	1,200 N·m (900 lbf·ft)	15 rev/min	75 rev/min	11.1	14.6	2.2
PT 2	515 N·m (380 lbf·ft)	1,700 N·m (1,250 lbf·ft)	9 rev/min	45 rev/min	11.1	14.6	2.2
PT 5	880 N·m (650 lbf·ft)	3,400 N·m (2,500 lbf·ft)	5 rev/min	25 rev/min	14.0	17.5	2.5
PT 6	880 N·m (650 lbf·ft)	3,400 N·m (2,500 lbf·ft)	5 rev/min	25 rev/min	14.0	17.5	2.5
PT 7	1,762 N·m (1,300 lbf·ft)	6,000 N·m (4,500 lbf·ft)	2.5 rev/min	12.5 rev/min	19.7	23.2	6.3
PT 9	2,710 N·m (2,000 lbf·ft)	9,500 N·m (7,000 lbf·ft)	1.8 rev/min	9 rev/min	24.4	27.9	8.3
PT 11	4,400 N·m (3,250 lbf·ft)	20,000 N·m (14,700 lbf·ft)	1.2 rev/min	6 rev/min	38.6	42.1	13.3
PT 12	9,500 N·m (7,000 lbf·ft)	34,000 N·m (25,000 lbf·ft)	0.5 rev/min	2.5 rev/min	49.8	53.3	6.5
PT 13	13,550 N·m (10,000 lbf·ft)	47,000 N·m (35,000 lbf·ft)	0.3 rev/min	1.5 rev/min	102.2	105.7	6.9
PT 14	22,375 N·m (16,500 lbf·ft)	100,000 N·m (73,500 lbf·ft)	0.2 rev/min	1 rev/min	119.4	122.9	10.4
PT 15	35,000 N·m (25,825 lbf·ft)	150,000 N·m (110,500 lbf·ft)	0.1 rev/min	0.5 rev/min	-	-	-
PT 16	46,500 N·m (34,400 lbf·ft)	200,000 N·m (147,500 lbf·ft)	0.08 rev/min	0.4 rev/min	266.5	270	-
PT 17	58,250 N·m (42,990 lbf·ft)	250,000 N·m (184,500 lbf·ft)	0.07 rev/min	0.35 rev/min	281.5	285	-
PT 18	70,000 N·m (51,630 lbf·ft)	300,000 N·m (221,270 lbf·ft)	0.06 rev/min	0.3 rev/min	376.5	380	-

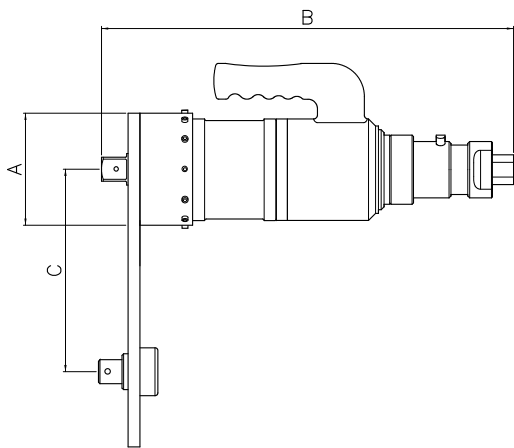


**FIGURE 14 – Standard Series tool (smaller)**

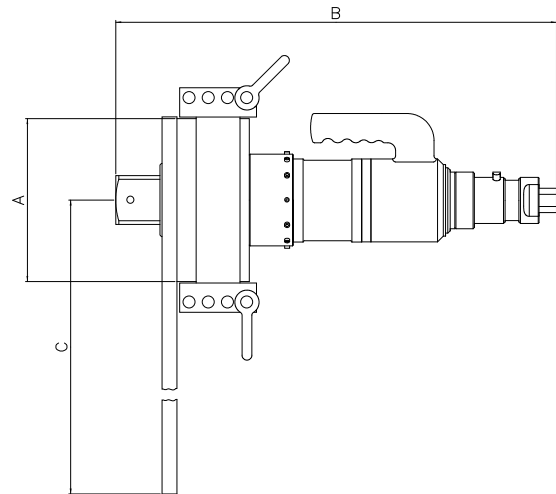

**FIGURE 15 – Standard Series tool (larger)**

Model	Dimensions (mm)						
	A	B			C minimum		C maximum
		Single speed	MTS	AUT	Single speed	MTS / AUT	
PT 1 (¾")	108	368	454	437	83	83	217
PT 1 (1")	108	373	459	442	83	83	217
PT 1A	108	373	459	442	83	83	217
PT 2	108	373	459	442	83	83	217
PT 5	119	424	510	493	83	86	264
PT 6	119	430	516	499	83	86	264
PT 7	144	457	543	526	146	146	333
PT 9	184	452	538	521	169	169	351
PT 11	212	555	641	-	-	-	500
PT 12	240	593	679	-	Blank plate		
PT 13	315	636	716	-	Blank plate		
PT 14	315	724	810	-	Blank plate		
PT 15	-	-	-	-	Application specific		
PT 16	410	780	866	-	Application specific		
PT 17	410	853	939	-	Application specific		
PT 18	520	850	936	-	Application specific		

*Due to continuous improvement all specifications are subject to change without prior notice.*

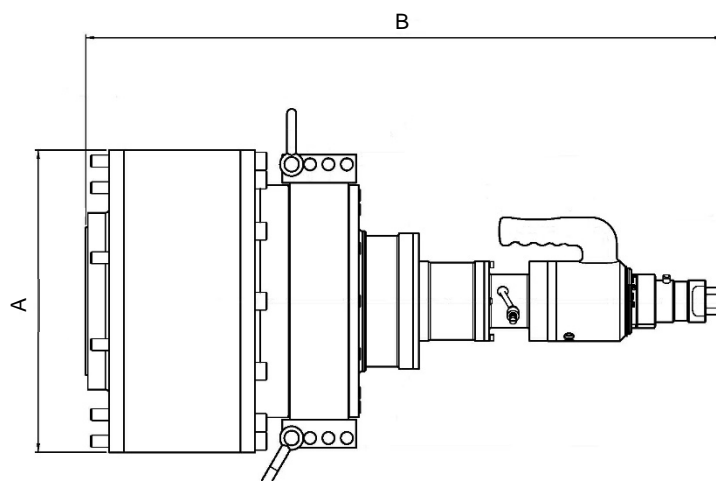

**FIGURE 16 – PT 15 – 18**

# DECLARATION OF CONFORMITY

## EU Declaration of Conformity (No 0023V1)

### The object of the declaration:

Pneutorque® Standard Series Torque Tools.

Model Names (Part Numbers):

PT 1 (16011.\*\*\* & 16031.\*\*\*), PT 1A (16097.\*\*\* & 16098.\*\*\*), PT 2 (16013.\*\*\*), PT 5 (16015.\*\*\*), PT 6 (16017.\*\*\*), PT 7 (16066.\*\*\*), PT 9 (16072.\*\*\*), PT 11 (16046.\*\*\*), PT 12 (18086.\*\*\*), PT 13 (16052.\*\*\*), PT 14 (16045.\*\*\*), PT 15 (18089.\*\*\*), PT 16 (18090.\*\*\*), PT 17 (18088.\*\*\*) & PT 18 (16054.\*\*\*).

Serial Numbers – All.

**The object of the declaration described above is in conformity with the relevant union harmonisation legislation:**  
Directive 2006/42/EC on Machinery.

### The object of the declaration described above has been designed to comply with the following standards:

Model Name	Standard
PT 1, PT 1A, PT 2, PT 5, PT 6 & PT 7	EN ISO 11148-6:2012 Hand-held non-electric power tools – Safety requirements. Pt 6: Assembly power tools for threaded fasteners.
PT 9, PT 11, PT 12, PT 13, PT 14, PT 15, PT 16, PT 17 & PT 18	EN ISO 12100:2010 Safety of machinery. General principles for design. Risk assessment and risk reduction

### The basis on which conformity is being declared:

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The technical documentation required to demonstrate that the products meet the requirements of the above Directives has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities.

The CE mark was first applied in: 1995.

### The authorised representative within the European Union (EU) is:

Francesco Frezza, Snap-on Equipment S.r.l., Via Prov. Carpi 33, 42015 Correggio RE, Italy

Signed for and on behalf of Norbar Torque Tools Ltd.

**Signed:**



**Full Name:**

Trevor Mark Lester B.Eng.

**Date:**

25 January 2021

**Authority:**

Compliance Engineer

**Place:**

Norbar Torque Tools Ltd., Wildmere Road, Banbury, Oxfordshire, OX16 3JU

## UK Declaration of Conformity (No 0023V0)

### The object of the declaration:

Pneutorque® Standard Series Torque Tools.

Model Names (Part Numbers):

PT 1 (16011.\*\*\* & 16031.\*\*\*), PT 1A (16097.\*\*\* & 16098.\*\*\*), PT 2 (16013.\*\*\*), PT 5 (16015.\*\*\*), PT 6 (16017.\*\*\*), PT 7 (16066.\*\*\*), PT 9 (16072.\*\*\*), PT 11 (16046.\*\*\*), PT 12 (18086.\*\*\*), PT 13 (16052.\*\*\*), PT 14 (16045.\*\*\*), PT 15 (18089.\*\*\*), PT 16 (18090.\*\*\*), PT 17 (18088.\*\*\*) & PT 18 (16054.\*\*\*).

Serial Numbers – All.

**The object of the declaration described above is in conformity with the relevant UK statutory requirements:**  
Supply of Machinery (Safety) Regulations 2008.

### The object of the declaration described above has been designed to comply with the following standards:

Model Name	Standard
PT 1, PT 1A, PT 2, PT 5, PT 6 & PT 7	EN ISO 11148-6:2012
PT 9, PT 11, PT 12, PT 13, PT 14, PT 15, PT 16, PT 17 & PT 18	EN ISO 12100:2010

### The basis on which conformity is being declared:

This declaration of conformity is issued under the sole responsibility of the manufacturer. The technical documentation required to demonstrate that the products meet the requirements of the above legislation has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities.

The UKCA mark was first applied in: 2021.

Signed for and on behalf of Norbar Torque Tools Ltd.

**Signed:**



**Full Name:**

Trevor Mark Lester B.Eng.

**Date:**

13 May 2021

**Authority:**

Compliance Engineer

**Place:**

Norbar Torque Tools Ltd., Wildmere Road, Banbury, Oxfordshire. OX16 3JU

## TROUBLE SHOOTING

The following is only a guide, for more complex faults please contact your local Norbar distributor or Norbar directly.

Problem	Likely Solutions
Tool output does not rotate when trigger pushed.	Check air supply is functioning & connected. Check air pressure setting (at least 1 bar). Check correct setting of direction knob. Output drive square sheared, needs replacing. Gear train or air motor is damaged.
Drive square sheared.	See maintenance section to replace.
Tool does not stall.	Tool has not achieved torque, increase air pressure. Fastener sheared or thread stripped. Gear train or air motor is damaged.

## GLOSSARY OF TERMS

Word or Term	Meaning
Air pressure graph	Graph supplied with Standard Series tool to show air pressure setting against required torque.
AUT	Auto Two speed.
CFM	Cubic Feet per minute (ft <sup>3</sup> /m), a measure of air flow.
BSP	British Standard Pipe, this is a thread size.
Lubro Control Unit	Unit to provide filtering and lubrication along with pressure regulation. Included with some tools.
MTS	Manual Two Speed.
PneuTorque®	Product name.
Reaction Arm	Device to counteract applied torque.

## **NORBAR TORQUE TOOLS LTD**

Wildmere Road, Banbury,  
Oxfordshire, OX16 3JU

UNITED KINGDOM

Tel + 44 (0)1295 270333

Email: [enquiry@norbar.com](mailto:enquiry@norbar.com)

To access latest versions  
of all Norbar Operator  
Manuals, scan the QR  
code below.



To find your nearest  
Norbar company or  
authorised distributor,  
scan the QR code below.



[www.norbar.com](http://www.norbar.com)